



INPUTS: All inputs 24VDC.
 Positive or Negative switching

SP1. Not Used
 SM5. "Lift Overloaded"
 SM4. "Lift on Independent Service"
 SM3. "Lift on Fire Service"
 SM2. "Fire Service Recall Lift returning to main floor"
 SM1. "Out of Service"
 TRIG. Tennant directory message trigger.
 C2. Common for TRIG and Special Messages 1-5
 Special Messages over ride Tennant Directory

Special Message input priority order;
 1. SM3
 2. SM2
 3. SM4
 4. SM5
 5. SM1

1-32. Floor Inputs
 DN-UP. Direction Inputs
 C1. Common for Floor and direction inputs



Revision:	CHANGES	DATE:	SIGN:	Job No:	Drawing No:
A				Drawn	Control System LCD ENCODED CONNECTION
B				APP	
C				Rev:	Date 22-6-15 SHEET 1 OF 1